2. Disassembly and Reassembly

2-1 Removal of COVER-DUST ASS'Y

1) Detach the COVER-DUST ASS'Y with a flat head screw driver.

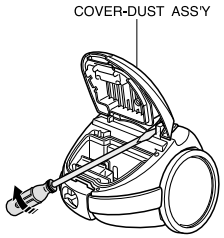

2-2 Disassembly of COVER-DUST ASS'Y

Loosen the four screws and detach INDICATOR ASS'Y, and DAMPER ASS'Y.

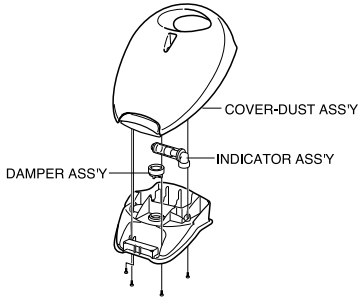

2-3 Removal of Main Body

Release 5 screws and lift the BODY-MID upward.

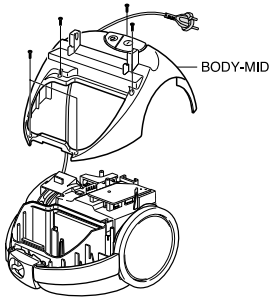

2-4 Removal of Main PCB Assembly

Separate the WIRE ASS'Y from the MAIN-PCB ASS'Y and loosen the screw.

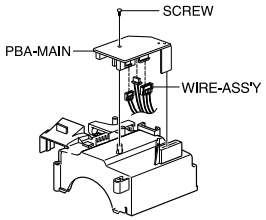

2-5 Removal of Main CASE UP Assembly

Loosen the two screws and detach CASE UP ASS'Y.

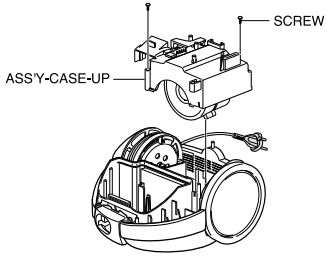

2-7 Cord Reel Replacement

1) Detach the guard-cord with a flat head screw driver.

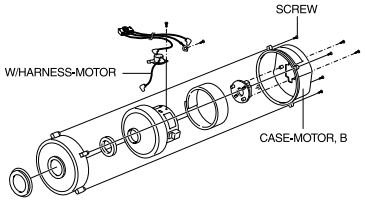

2-6 MOTOR replacement

1) Loosen the four screws and separate CASE-MOTOR,B from the MOTOR.

2) Lossen the screw and separate MOTOR and W/HARNESS-MOTOR.

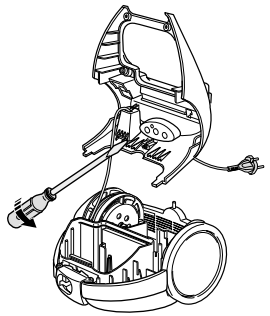

2) Separate the CORD-REEL from the body.

3) Hold the body reel and wind the power cord to the 3 times.
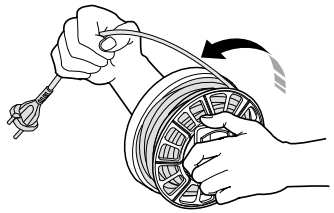
4) When the winding is completed, immediately assemble the CORD-REEL to the body.